


# ROPE LOCKS

## Important Mounting Instructions

1. Attach rope lock to locking rail with the four hex bolts and locking nuts provided (3/8" x 1-1/4", Grade 5).
2. Hand tighten hex bolts to set rope lock in place. Evenly tighten locking nuts.
3. Insert hand line in rope lock. Don't forget to put hand line through the oval locking ring.
4. Tighten the set screw to clamp hand line without crushing it. After the counterweight set has been loaded for a few days, re-check and adjust the set screw and lock nut as necessary.

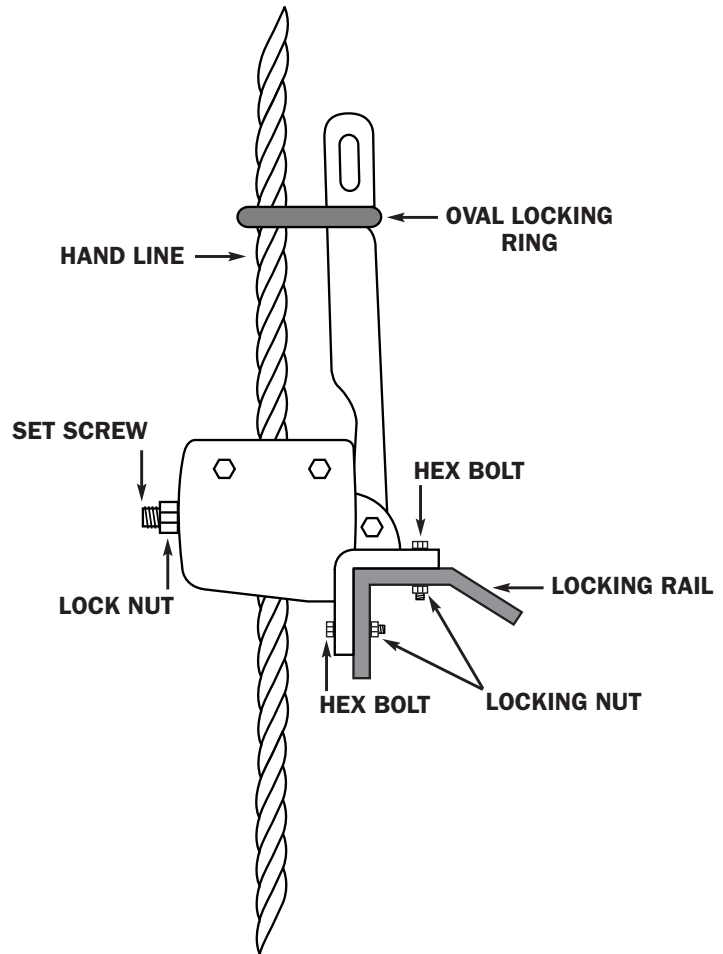

Maximum recommended working load (RWL) for J.R. Clancy rope locks is 50 pounds (20 Kg) applied in either direction.

Questions? Call **1-800-836-1885**

**JRCLANCY**  
QUALITY SINCE 1885